Instructional Manual Continuous Ink System for use in Epson Artisan 700/710/800/810 Printer

Before using this product, please read and follow the instructions carefully.

Conduct Parts Check:

- 1. Accessories
 - a. Continuous Ink System (1)



Fig. 1-1

b. Air breather plugs (6) c. Syringe (1) d. Square adhesive pad (2)



Fig. 1-2

- 2. Set-Up Continuous Ink System (CIS)
 - a. Before installation, lay out all your parts in front of your printer.
 - b. Check your system for any leakage, and make sure your tubing system is tightly connected and straight.
 - c. Place the CIS ink tank on the same horizontal level as printer, The ink tank has two chambers per color, the front chamber is to hold the ink and the rear chamber is to control the flowing pressure. It is important that the rear chamber contains only a small amount of inks(as little as possible). The ink should reside in the front chamber. Make sure the ink tank plugs are tightly closed, tilt the ink tank forward to make the majority of the ink flow into the front chamber if the rear chamber has some excess ink. (Fig. 2-1 through Fig. 2-3).
 - d. Place the CIS on the left hand side of the printer as shown (Fig.2-4), and keep it at the same level as the printer.
 - e. Hold down the ink tank with one hand and unplug the original air stoppers as shown (Fig.2-5), make sure to save these for later use.
 - f. Install the Air Breather wider part into the ink reservoir tank, making a snug fit (Fig.2-6).

Caution: Make sure not to push the breathers too tight as it could crack the tank. Also when removing the air breathers from the tank use caution to avoid cracking.



Fig 2-1



Fig 2-2



Fig 2-3



Fig.2-4



Fig.2-5



Fig.2-6

- 3. Cartridge Installation
 - a. Unplug the printer power.
 - b. Ensuring that the colors correspond, push the cartridges all the way down in the compartment just as you would do with the original cartridges (Fig.3-1).



Fig.3-1

4. Tube Adjustment and Positioning

- a. Place the square shaped adhesive on the top left side of the printer and insert the tubing as shown (fig.4-1).
- b. Close the cover and push down on it slightly so that it closes as much as possible (Fig. 4-3).







Fig 4-1 Fig 4-2 Fig 4-3

d. Turn on the printer and make sure the system moves smoothly.

5. Refilling Ink

When the ink levels reach the indicator margin (sticker on the ink tank with red line Fig 5-1) the ink tank system has reached its low level line and needs to be refilled.

Follow these steps:

- 1. Gently remove the air breather plugs in order to have more filling room.
- 2. Remove plugs off of the filling hole(Fig 5-2) and refill the proper color of ink into the corresponding ink tank (Fig 5-3), (use towel to wipe off any spillage).
- 3. Make sure you use the specially designed inks Low Foam Ink for the CI System as they are specifically designed for optimal results.

NOTE: When removing the CIS, remove cartridges and put tape or a napkin over dispensing hole. Printer and ink tank MUST remain at the same level (not higher and not lower).







Fig 5-1 Fig 5-2 Fig 5-3

6. Attention:

- 1. After installing the CI System ,do not remove the cartridges unless it is necessary .If cartridges are removed, Immediately place cartridges upside down with ink exit holes facing up to avoid leaking. If cartridges are removed for more than an hour, please cover ink exit holes with tape.
- When you are printing do not move the ink tank up or down. Keep it stable and at the same level as the printer.
- Store at 15-35 degrees Celsius.
- 4. The ink and cartridge flow have been designed and tested to function as a system. We recommend you use the specially designed ink Low Foam Ink in the CIS for optimal results.

7. Caution:

- 1. Do not ingest ink and keep out of reach of children
- 2. Do not leave under sunlight or in extreme weather conditions
- 3. Do not drop ink tank or handle roughly

To reset the cartridges follow step 8

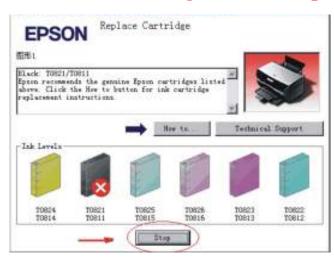


Fig 8-1

- 8. When you get the "Replace Cartridge" message follow these steps.
 - a. Click on the "How to" button.
 - b. You will get a screen that tells you to use Epson ink cartridges, click on the "Next" button.
 - c. The 2nd screen tells you to remove cartridges from the package, click on the "Next" button.

 - d. The 3^{rd} screen lets you know it's going to move the printheads to replacement position, click on the "OK" button. e. The 4^{th} screen tells you to remove cartridges, click on the "Next" button. screen tells you to install cartridges, when you get this screen the first thing you need to do is push the Reset button that is on top of the cartridges (fig. 8-1). Push this button once and then click on the "OK" button.
 - g, the next screen should show you that the ink is charging, when it is done charging click on the "finish" button.



Fig 8-1

Thank you for purchasing the Continuous Ink System: We hope you found this manual useful.

	Troubleshooting tips	
	Problem	Suggestion
1	If the ink tank is full of ink computer shows a message	Please refer to the reset procedure.
	"Replace Cartridge", That the cartridges are empty.	Step 8.
	The printer keeps track of how much ink is being used	
	and thinks that the cartridge should be empty so you will	
	have to reset the cartridges chips.	
		There is air in the system or cartridges. Try running a couple of
2		cleaning cycles. If white lines continue use the provided
	Banding or white lines in my print outs.	syringe to suck the air out of the bottom of the trouble cartridge
		and you can dump the ink that fills the syringe back into the top
		of the CI system. (Make sure to thoroughly rinse the syringe
		when completed.)
3		The shipping plugs need to be removed before installing and replaced with the air breathers to eliminate any pressure being
	When I have completed a printing job the ink is	built up in the system, along with protecting the ink from
	siphoning backwards down the tubing.	contamination. Also the ink tank should be sitting on the same
	siphoning backwards down the tubing.	level surface as the CI system. If the air breathers are covered
		with dried ink, you can rinse the air breather and dry
		thoroughly to regain use.
4	The tubing is getting caught inside the printer resulting	If the tubing is not adjusted correctly, if it's to short or to long
	in an error message "paper loading error".	causing it to slap the inside of the printer, Please adjust.
		If the ink is dumped into the system to quickly then it allows
5	After refilling the tanks the printer won't print.	air to enter the system. Use the provide syringe to extract ink
		and air from the bottom of the cartridges. The ink that fills the
		syringe can be slowly dumped back into the top of the ink tank.
6	After installing the CI system the printer isn't	Remove the cartridges, turn off the printer and reinstall the
0	recognizing some of the cartridges.	cartridges. Then you can continue printing.
	If you are still unable to fix the problem call your dealer for support.	